



# P5043B

HMI with 4.3" TFT LCD displa


- Cortex 600 MHz Processor
- Built-in Power Isolation
- Built-in PLC Expansion function
- PCB coating for Stability in Harsh Environment
- Fan-less Design for Cooling Method
- High Noise Immunity Design for Industrial Application

Model		P5043SB	P5043NB
Display	Panel Size	4.3" TFT (16:9)	
	Panel Resolution	480 x 272	
	Brightness	500 (cd/m <sup>2</sup> )	
	Contrast Ratio	500	
	Backlight Type	LED	
	Backlight Life Time	>30,000 Hrs.	
	Colors	16.7M	
	LCD Viewing Angle	50/70/70/70 (T/B/L/R)	
Touch	Type	4-wire Resistive Type	
	Accuracy	X axis ±2%; Y axis ±2%	
Memory	Flash	256MB	
	RAM	128MB	
System	CPU	32 bit RISC Cortex 600MHz	
	RTC	Yes	
Dimension /Weight	Dimensions W x H x D	128.0 x 102.0 x36.4 (mm)	
	Cut-out	118.5 x 92.5 (mm)	
	Weight	215 (g)	235 (g)
I/O Port	Serial 1 (DB-9)	COM1 : RS-232 (2W) COM2 : RS-422/485 (4W) COM3 : RS-485 (2W)	
	Serial 2 (Terminal Blocks)	-	


	RS-422/485 Isolation	-	
	Ethernet	-	10M / 100M
	USB HOST	USB2.0 x 1	
	USB Device	USB2.0 x 1(Mini-USB)	
	Micro-SD Slot	-	
	Audio Output	-	
	Video Input	-	
	Termination Switch	Yes	
<b>I/O Extension</b>	PLC Extension	Yes	
	HMI Extension	Yes	
	Wireless Module	Yes	
<b>Power</b>	Power Input Range	14 ~ 32VDC	
	Power Isolation	Yes	
	Isolation Resistance	Exceed 50MΩ at 500VDC	
	Power Consumption	9.6W (@24VDC)	10.1W (@24VDC)
<b>Environment</b>	Protection Structure	Front panel : IP65 / Rear Case : IP20	
	PCB Coating	Yes	
	Operating Temp	0~50°C	
	Storage Temp	-20 ~ 60°C	
	Relative Humidity	10%~90% (40°C Non-condensing)	
	Withstand Voltage	500VAC/20mA/1 Min. (between charger & FG terminals)	
	Vibration Endurance	5 to 9Hz Half-amplitude: 3.5mm ; 9 to 150 Hz Constant acceleration: 19.6m/s <sup>2</sup> (2G) ; 3 directions of X, Y, Z : 10times (IEC61131-2 complaints)	
<b>Software</b>	FvDesigner V1.6.40 or later versions		
<b>Certification</b>	CE , UL		

## 「 Dimensions Drawing 」




### P5043SB

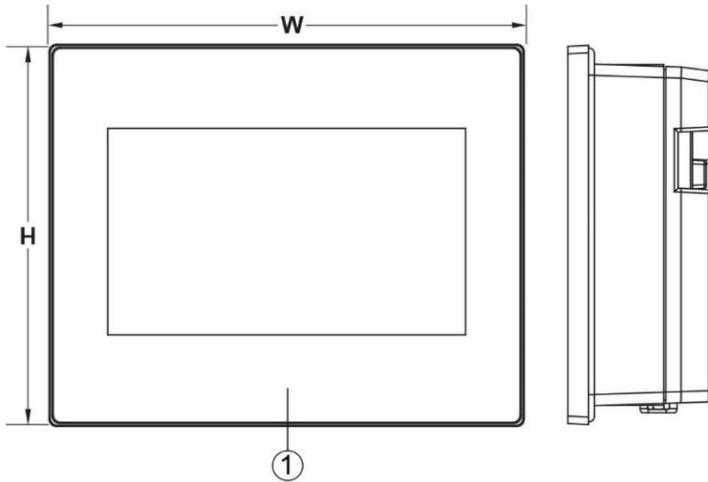

W	128.0 mm
H	102.0 mm
D	36.4 mm


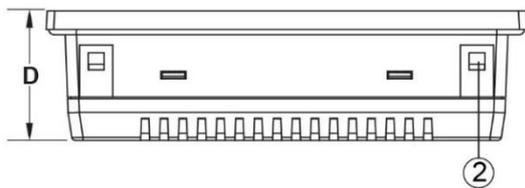


①	Power Indicator Light
②	Mounting Hole
③	Power Connector
④	COM2/COM3 Termination Switch
⑤	COM1/COM2/COM3: DB-9 Male Connector
⑥	USB Connector
⑦	Mini USB Connector

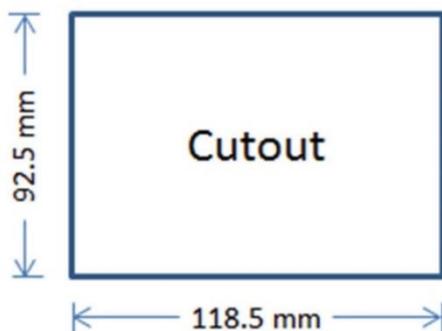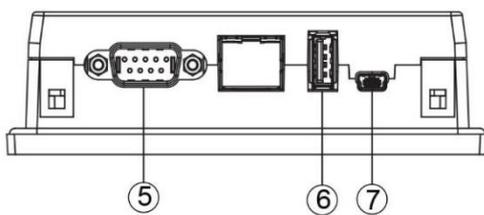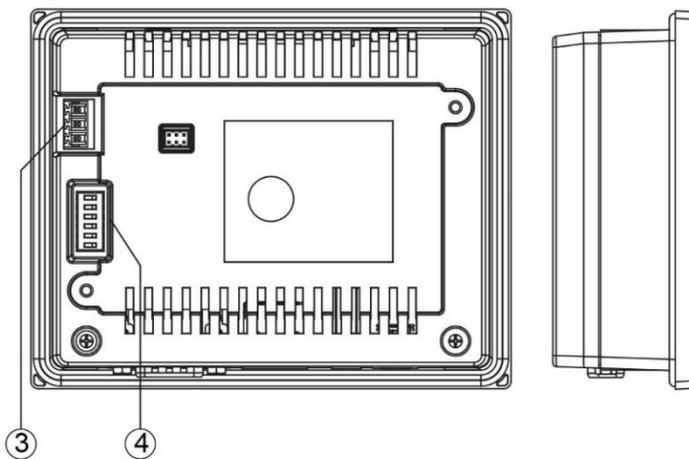


DB-9 Male Connector				
PIN#	COM1 [RS-232]	COM2 [RS-422]	COM2 [RS-485]	COM3 [RS-485]
1	-	TX+	DATA+	-
2	RX	-	-	-
3	TX	-	-	-
4	-	RX+	-	-
5	GND	GND	GND	GND
6	-	TX-	DATA-	-
7	-	-	-	DATA+
8	-	-	-	DATA-
9	-	RX-	-	-




## P5043NB

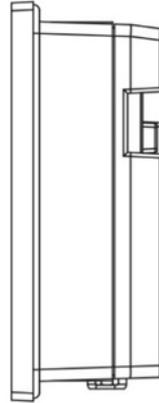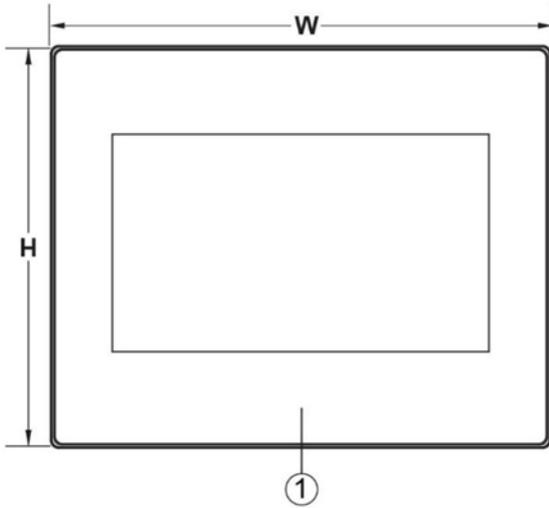


W	128.0 mm
H	102.0 mm
D	36.4 mm

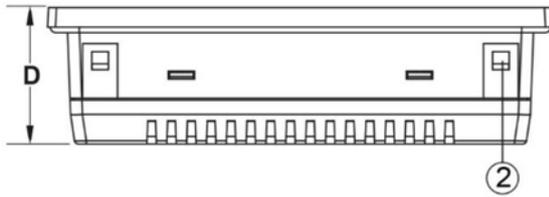


①	Power Indicator Light
②	Mounting Hole
③	Power Connector
④	COM2/COM3 Termination Switch
⑤	COM1/COM2/COM3: DB-9 Male Connector
⑥	Ethernet RJ45 Connector (for N model)
⑦	USB Connector
⑧	Mini USB Connector

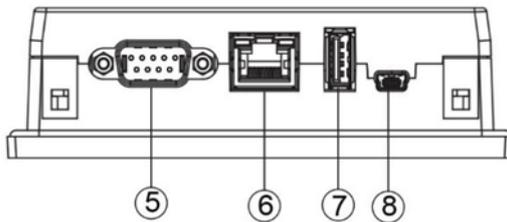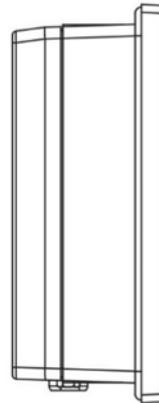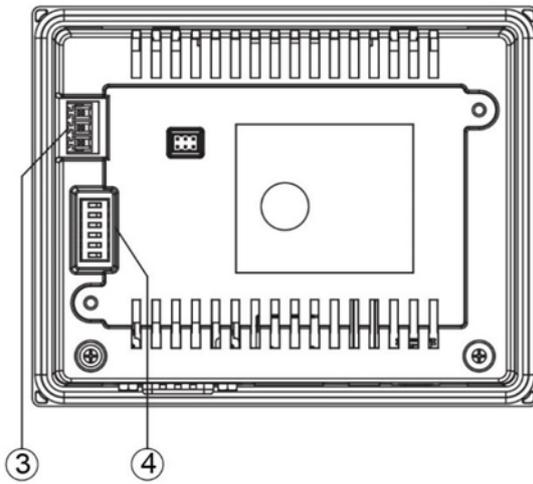


**DB-9 Male Connector**

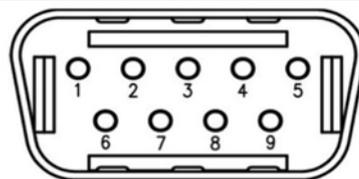

PIN#	COM1 [RS-232]	COM2 [RS-422]	COM2 [RS-485]	COM3 [RS-485]
1	-	TX+	DATA+	-
2	RX	-	-	-
3	TX	-	-	-
4	-	RX+	-	-
5	GND	GND	GND	GND
6	-	TX-	DATA-	-
7	-	-	-	DATA+
8	-	-	-	DATA-
9	-	RX-	-	-

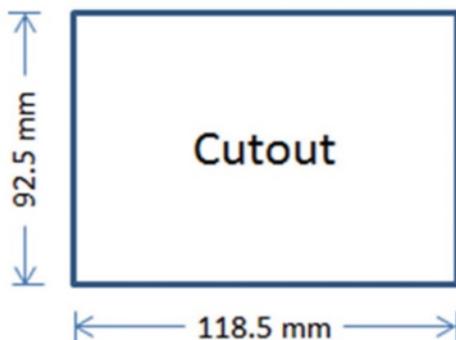

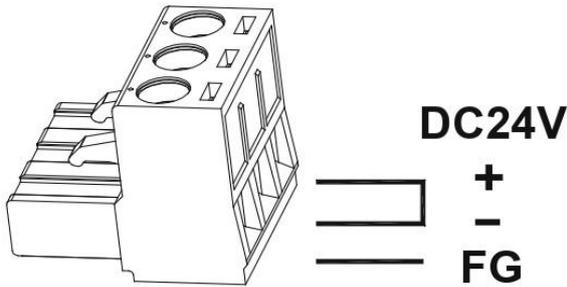


- Be sure to connect the ground FG terminal to a class-3 ground (Ground resistance should not exceed 100Ω). Try to make the ground wire as short as possible.
- Use 22 – 14 AWG (0.6 – 1.5 mm<sup>2</sup>) wire for the power connections.


	<b>Caution</b>	Please use solid wires between 22AWG and 14AWG. Maximum 300V and rated temperature to 105°C for input power pins.
--	----------------	---

	<b>Caution</b>	Make sure the HMI is properly grounded to prevent electrical shock, fire or malfunction.
--	----------------	--

### Recommended

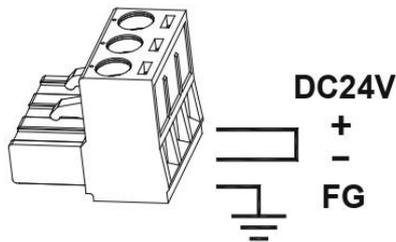


### Prohibited

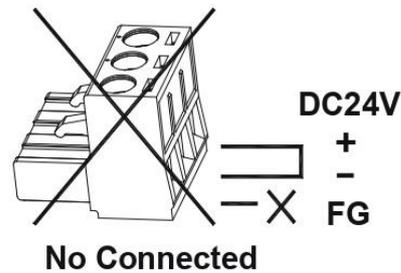


- HMI unit and other equipment should have the same electrical grounding (reference voltage level), otherwise communication errors may occur.

### GOOD

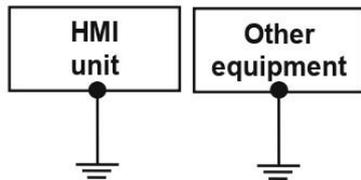

### BAD

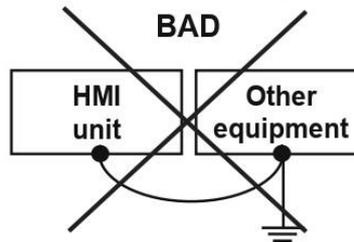

## Operation

- Do not use sharp objects or excessive force to press the touch screen. This may damage the touch screen. Screen protector can be applied to the HMI screen to protect it from damage, for ordering information, please contact our sales department.
- Do not use the output signal of the device as any safety function or system emergency stop. It may result in personal injury or equipment damage if a malfunction of the touch occurs.

## Maintenance and Service

- The agreed guarantee applies.
- Only qualified personnel should make repairs and perform maintenance.
- Disconnect the device from the power supply before carrying out cleaning or maintenance.
- Clean the front panel with a soft cloth and mild detergent.
- Please use original replacement spare parts or accessories.